



# QR Code Tread Measurements


## How to Input Tread Depth

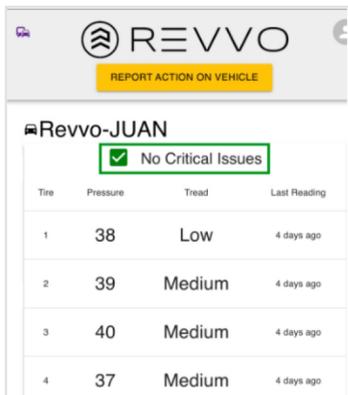


1. Click on “Report Action on Vehicle” at the top of the screen

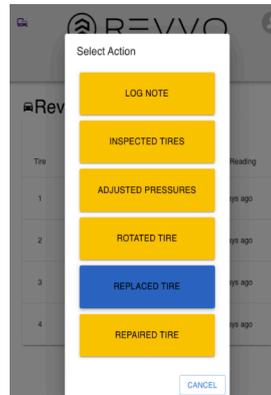

2. Click on “Replace Tire”

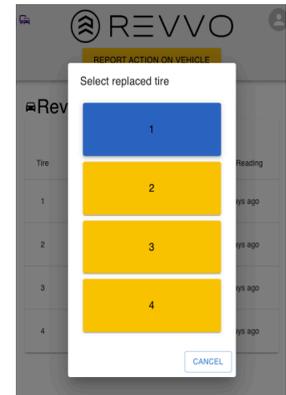

3. Select tire you will be setting Tread Depth for

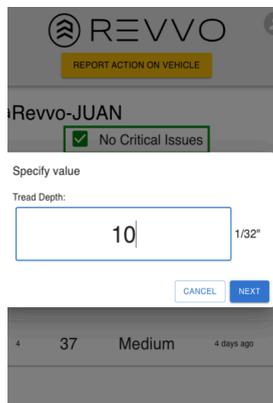

4. Enter value and click “Next”

### Confirm Action

Action: Tire Replacement

Position: 1

Measured Tread: 10

CONFIRM

CANCEL

5. Confirm Tread Depth value for the tire and click “Confirm”

6. Repeat for remaining tires on Vehicle