

# How to Change Tread Display

## Tread Class vs Tread Value

### Step #1

In the Admin page, select "Options"

### Step #2


Select "Display" tab

### Step #3

Select "Show Tread Value"

### Step #4

Save

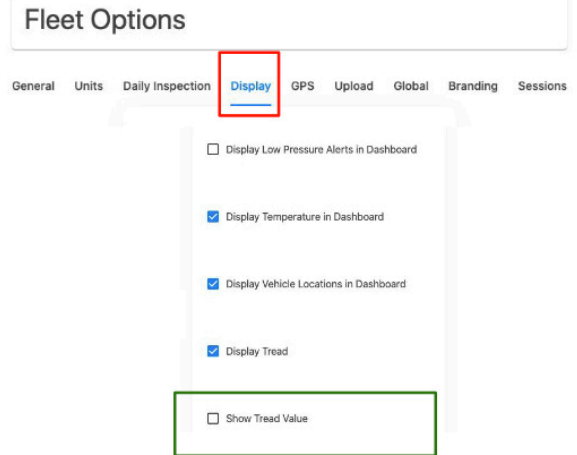

## Fleet Dashboard

